



INSTRUCTION SHEET 07203

Part #: 920X
Description: SCZ Hitch Installation
Date: 5/3/2010

Instructions for Installing the SCZ Hitch

1. Prepare the machine so there is easy and safe access to the work area. Remove the ignition key and disconnect the spark plug wires. Maintain all safety related work procedures. Always wear eye and hand protection.
2. Remove the center bolt and serrated flange nut securing the skid plate to the rear bumper. See Figure 1. Discard original hardware.
3. Install the hitch to the center bolt hole using (1) one 3/8-16 x 1-1/4" hex head bolt, (1) 3/8" flatwasher and (1) one 3/8-16 elastic stop nut. See Figure 1. Tighten hardware securely.
4. At the time of delivery, operational and safety instructions of this accessory should be explained thoroughly to the customer. See SCZ Operator's Manual.

DANGER:

To avoid injury from burns, allow the mower to cool before removing the hardware and installing the hitch.

WARNING

MAXIMUM TOWED WEIGHT
NOT TO EXCEED 250 LBS
DO NOT CARRY PASSENGERS



READ THE OPERATOR'S MANUAL

482610

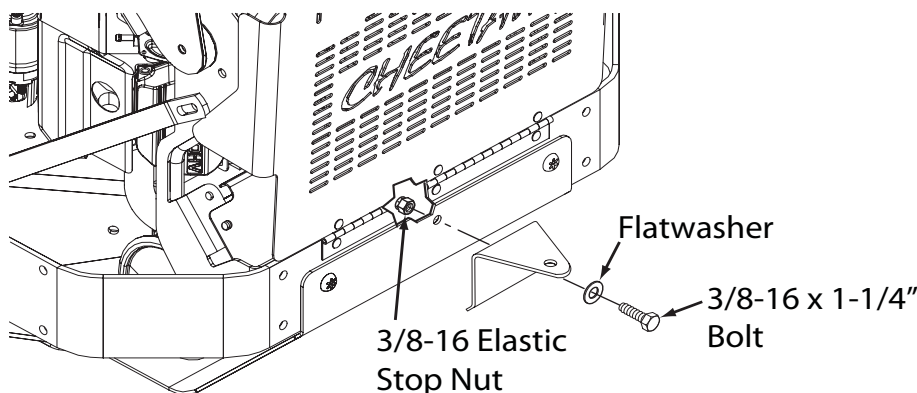


Figure 1. SCZ Hitch Mounting